 


de Potentiometer und Rädersatz  
 fr Unité potentiométrique et jeu d'engrenages  
 en Potentiometer unit and set of cogs  
 it Unità potenziometrica e serie di ingranaggi  
 es Unidad potenciométrica y juego de ruedas  
 sv Potentiometerenhet och kugghjulssats  
 nl Potentiometereenheid met tandwielset

de Montagevorschrift  
 fr Instruction de montage  
 en Fitting instructions  
 it Istruzioni di montaggio  
 es Instrucciones de montaje  
 sv Monteringanvisning  
 nl Montagevoorschrift









**370640**  
**370641**




**370644**

A 44 W

de Installationsanweisung für die Fachkraft / den Monteur  
 fr Notice d'installation pour le spécialiste / le monteur  
 en Installation instructions for the technician  
 it Informazioni per il personale specializzato di montaggio  
 es Instrucciones de instalación para el técnico  
 sv Installationsinstruktion för fackman / installatör  
 nl Installatie aanwijzing voor de vakman / monteur

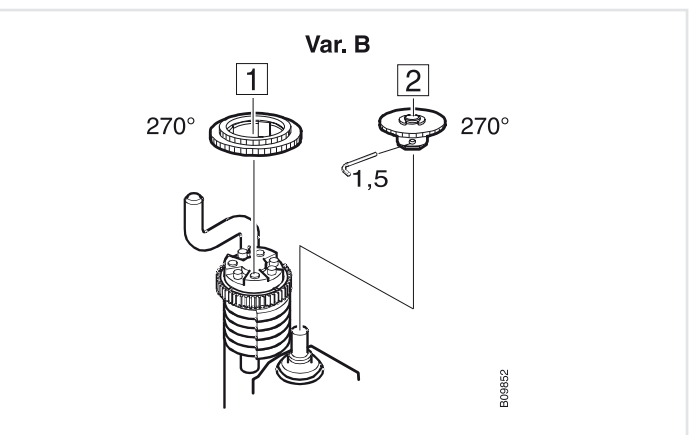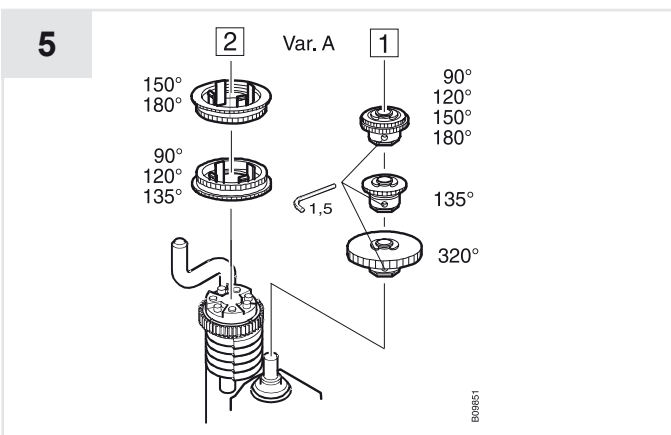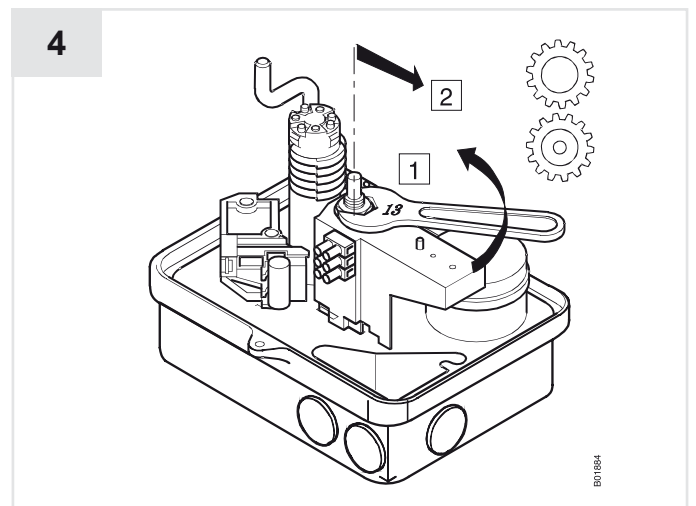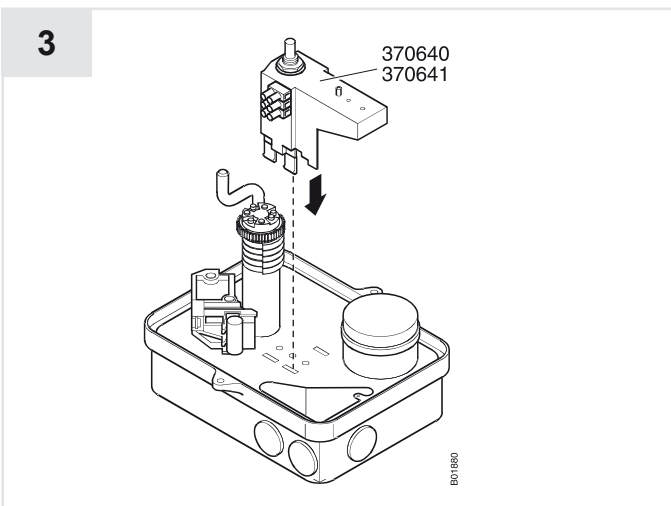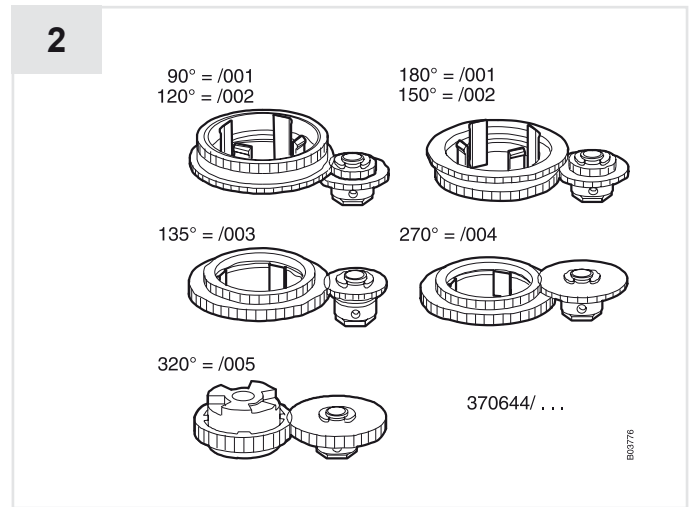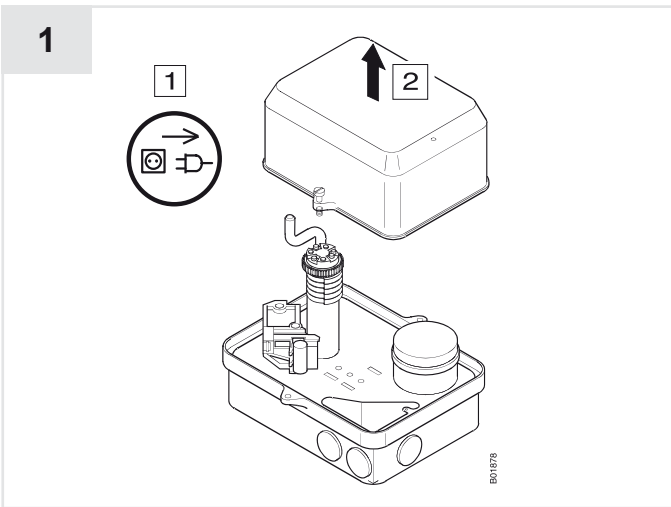


6

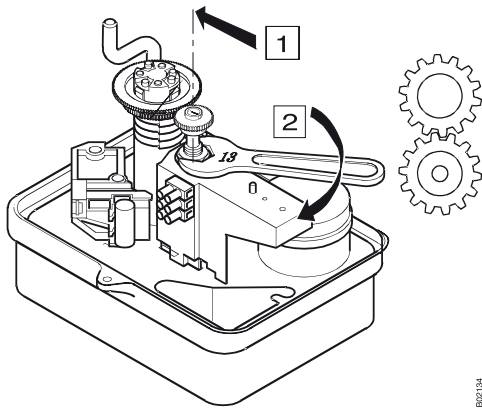


B02134

7

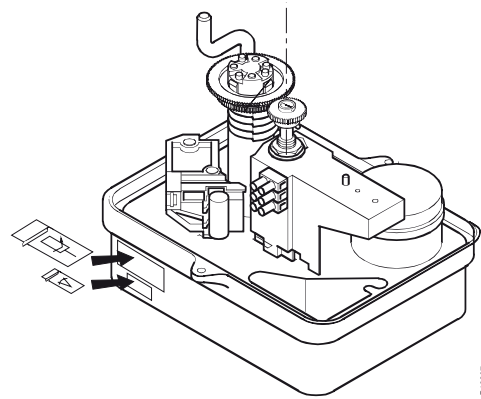

B11207

8

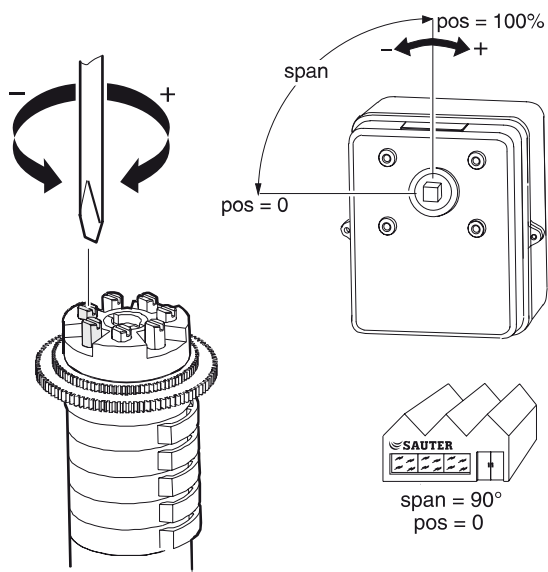

B02131

de Dokument aufbewahren  
 fr Ce document est à conserver  
 en Retain this document  
 it Conservare il documento  
 es Guardar el documento  
 sv Spara dokumentationen  
 nl Document bewaren

© SAUTER Head Office  
 Fr. Sauter AG  
 Im Surinam 55  
 CH-4016 Basel  
 Tel. +41 61 - 695 55 55  
 Fax +41 61 - 695 55 10  
 www.sauter-controls.com  
 info@sauter-controls.com

Printed in Switzerland